

**K Series**

# **Commercial fully automatic coffee machine**

**Model K95-Plus/K95L-Plus/K95T-Plus/K95LT-Plus**





## Content

|  |           |
|--|-----------|
| <b>1 For your safety .....</b>                                 | <b>01</b> |
| 1.1 Proper use .....   | 01        |
| 1.2 Prerequisites for using the coffee machine .....           | 01        |
| 1.3 Explanation of safety symbols .....                        | 02        |
| 1.4 General safety concerns when using the coffee machine..... | 02        |
| <b>2 Description of machine .....</b>                          | <b>05</b> |
| 2.1 Machine overview .....                                     | 05        |
| 2.2 Screen interface .....                                     | 06        |
| 2.3 Scope of delivery .....                                    | 08        |
| 2.4 Technical data .....                                       | 10        |
| <b>3 Installation .....</b>                                    | <b>11</b> |
| 3.1 Installation tips .....                                    | 11        |
| 3.2 Dimensions .....   | 11        |
| 3.3 Installation location .....                                | 13        |
| 3.4 Electrical connection .....                                | 13        |
| 3.5 Water supply connection .....                              | 13        |
| <b>4 Start-up for the first time .....</b>                     | <b>15</b> |
| 4.1 Material filling .....                                     | 15        |
| 4.2 Initially start-up program setting .....                   | 15        |
| <b>5 Operation .....</b>                                       | <b>15</b> |
| 5.1 Coffee beans filling .....                                 | 15        |
| 5.2 Water tank filling .....                                   | 16        |
| 5.3 Milk connection .....                                      | 16        |
| 5.4 Switch on the machine .....                                | 17        |
| 5.5 Beverage preparation .....                                 | 17        |
| 5.6 Grinding coarseness setting .....                          | 19        |
| <b>6 Program setting .....</b>                                 | <b>19</b> |
| 6.1 Access to the menu .....                                   | 19        |

## Content

|                                     |    |
|-------------------------------------|----|
| 6.2 Program setting menu tree ..... | 20 |
| 6.3 Maintenance .....               | 20 |
| 6.4 Beverage .....                  | 22 |
| 6.5 System .....                    | 26 |
| 6.6 Operation panel .....           | 28 |
| 6.7 User .....                      | 32 |
| 6.8 Language .....                  | 33 |
| 6.9 Statistics .....                | 33 |
| 6.10 Help .....                     | 34 |

## **7 Cleaning and maintenance ..... 34**

|  |    |
|--|----|
| 7.1 Cleaning intervals overview .....      | 34 |
| 7.2 Parts preparation .....                | 35 |
| 7.3 Daily cleaning .....                   | 35 |
| 7.4 Weekly cleaning .....                  | 37 |
| 7.5 Brew unit cleaning if presents .....   | 39 |
| 7.6 Milk system cleaning if presents ..... | 39 |
| 7.7 Descaling if presents .....            | 40 |

## **8 Messages and explanation ..... 41**

|                                |    |
|--------------------------------|----|
| 8.1 Operational messages ..... | 41 |
| 8.2 Error message .....        | 42 |

## **9 Decommissioning ..... 42**

|   |    |
|---|----|
| 9.1 Prepare for decommissioning .....                   | 42 |
| 9.2 Short-term decommissioning (within one month) ..... | 43 |
| 9.3 Long-term decommissioning (over one month) .....    | 43 |

## **10 Transport and storage ..... 43**

|  |    |
|--|----|
| 10.1 Transport .....   | 43 |
| 10.2 Storage .....   | 44 |
| 10.3 Recommissioning after prolonged periods of storage or non-use ..... | 44 |

## **11 Disposal ..... 44**



## 1. For your safety

### 1.1 Proper use

#### 1.1.1 Coffee machine

1. The machines are commercial machines for preparing drinks and are intended for use in food services, offices, hotel, convenience store and other similar environment.
2. The machines are designed to process coffee beans and fresh milk.
3. The machines are intended for operation indoors. Please note that the machines are not suitable for use outdoors.

### 1.2 Prerequisites for using the coffee machine

1. The machines are intended for use only by trained personnel.
2. Do not operate the machines or add-on units until you have completely read and understood relative description.
3. Self-service coffee machines must always be monitored to protect the users.
4. Do not use the machines or add-on units if you are not familiar with the various functions.
5. Do not use the machines unless the machine or the add-on units have been cleaned or filled as intended.
6. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
7. Do not install the coffee machine in the area of water jet.
8. Clean the coffee machine at least once a day and more frequently if necessary, and only use cleaning tablet, descaling powder supplied by Kalerm. See chapter 7 or Cleaning&Descaling manual for the details.
9. See the following concerns carefully and operate according to the display during maintenance. See chapter 7 or Cleaning&Descaling manual for the details.

### 1.3 Explanation of safety symbols

Observation of these safety instructions is imperative to ensure personal safety and the intactness of machine. Symbols and signal words indicate the level of hazards as follows:



#### **WARNING**

**WARNING** indicates a potential danger, if not avoided, will may result in death or serious injury.



#### **CAUTION**

**CAUTION** indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.



#### **NOTICE**

**NOTICE** directs your attention to the risk of damage to machinery.

### 1.4 General safety concerns when using the coffee machine

Improper use of coffee machine can lead to potential danger during operation. To avoid personal injury and health hazard, please note following tips when using the coffee machine.



#### **WARNING**

##### **Health hazard due to electrical shock**

If the supply cord is damaged, it must be replaced by a special cord or assembly available from the manufacturer or its service agent.

1. Damaged power cords, lines or plug connections can lead to electrocution.
2. Do not connect any damaged power cords, lines or plug connections to the power supply.
3. Ensure that the machine and the power cord are not near any hot surfaces such as gas or electric stoves or ovens.
4. Ensure that the power cord is not pinched and does not chafe on sharp edges.
5. Immerse power plug in water or other liquids are not allowed, as well as pouring water or other liquids on the power plug. Power plug must be dry.
6. Repairs or servicing improperly performed on electrical systems can lead to electrocution.
7. Have servicing work carried out by authorized persons with corresponding qualifications only.
8. This appliance incorporates an earth connection for functional purposes.



## WARNING

### **Danger of suffocation**

1. Plastic packaging materials could cause children to suffocate.
2. Ensure that children and persons with reduced physical, sensory, or mental capabilities have no access to plastic packaging materials.



## CAUTION

### **Risk of scalding**

1. Hot liquids during cleaning can lead to scalding. Keep hands away from the spouts during this process.
2. Do not put anything on the drip grid.
3. Use only suitable drinking vessels.
4. Always be careful with hot drinks.
5. IN CASE OF SCALDING: Immediately cool the affected area and consult a doctor, depending on the severity of the injury.



## CAUTION

### **Risk of injury**

1. If objects drop into the grinder, splinters may be ejected, leading to injury.
2. Never put any objects into the grinder.



## CAUTION

### **Cutting injuries/crushing**

1. Active components in the interior of coffee machine will hurt fingers or hands.
2. Remember to switch off coffee machine and unplug the power cord before removing grinder or reaching into brew module.

**CAUTION****Irritation from cleaning agent**

1. Cleaning tablets, milk system cleaning agent, and descaling agent can lead to irritations.
2. Observe the hazard warnings on the label of the respective cleaner.
3. Avoid contact with your eyes and skin.
4. Wash your hands after contact with cleaning agent. Consult a doctor if necessary.
5. Cleaning agent must not find their way into drinks.

**CAUTION****Health hazard due to germ formation**

1. Inadequate cleaning can result in food residues accumulating in the machine , thereby contaminating products.
2. Do not use the machine unless it has been cleaned according to the instructions.
3. Clean the machine daily in accordance with the instructions.
4. Inform operating personnel of the necessary cleaning measures.
5. If the machine is not used for extended periods, residue may accumulate. cleaning the machine before using.
6. Using a water filter for too long can lead to the build-up of algae. Replace the water filter when prompted to do so by the machine.
7. Coffee beans, and fresh milk must in the expiration date.

**CAUTION****Risk of mechanical injury**

- 1.The appliance has to be placed in a horizontal position.
- 2.If the machine has not been drained and emptied completely, it must not be stored at sub-zero temperatures. Put the machine in the temperature about of 20°C for 2-4 hours if freezing occurs.
- 3.The appliance should be cleaned in the recommended manner and should not be submerged in water or cleaned with a spray head.


## 2. Description of machine

### 2.1 Machine overview

The K95Plus series coffee machines are available with numerous options. A sample configuration is illustrated here. Please note that your coffee machine may look different from the configuration shown here.




## Rear of machine

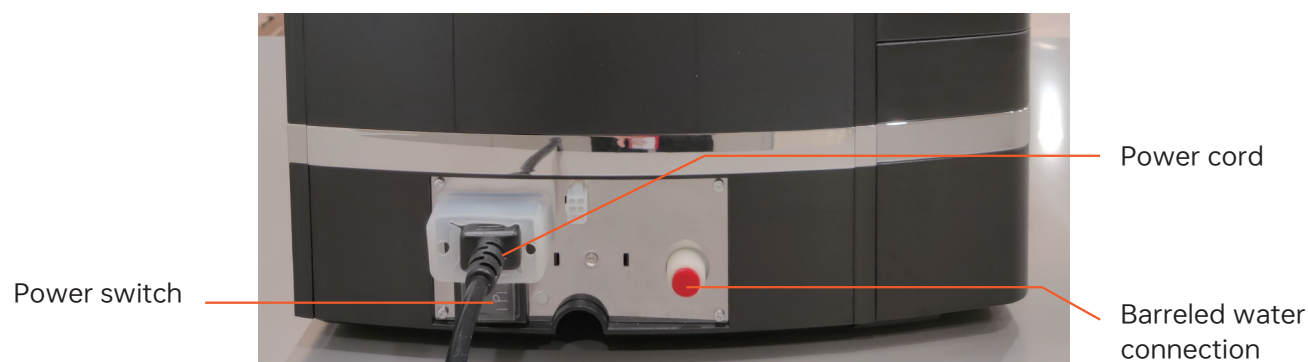

## 2.2 Screen interface

K95Plus series are available with two kinds of user interfaces-standard, self-service to satisfy the needs of different scenarios. See page 28 for changing the themes.

### 2.2.1 Standard interface

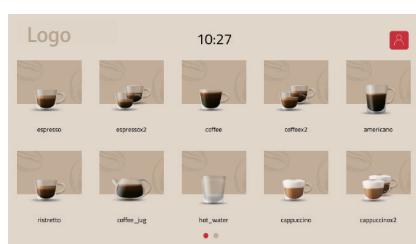

**Touching 'logo' icon can start up member function setting**

Standard interface is designed to use for non-professional operator or professional personnel. Member function can be performed on the upper right of screen.

### 2.2.2 Self-service interface



**Select language quickly here (four different languages are available)**












Specially designed to use in self-service scenarios, such as breakfast store and hotel. User can select language from upper-right corner of screen quickly without access to the menu.

### 2.2.3 Professional interface









Generally used in commercial scenarios, and the machine needs to assign with professional operating personnel to use, continue to order is available in this interface.

## 2.2.4 Symbols on the screen

| Symbol  | Name                    | Description  |
|---|-------------------------|--|
|    | Member                  | Access to membership setting                         |
| <b>Logo</b>   | Logo                    | Access to the menu setting                           |
|    | Scroller                | Tips for drinking pages and current page             |
|    | Add                     | Add drinks   |
|    | Close                   | Close current page                                   |
|    | Alert                   | View the exception message                           |
|    | Brew unit position      | Display operation status of current brew unit        |
|    | Error message           | Display error message on the current machine         |
|   | Water-flow              | Display current water-flow rate, unit: ml/s          |
|  | Inactive                | Drink is 'inactive' and cannot be prepared           |
|  | Thermoblock temperature | Display thermoblock temperature                      |
|  | Operation steps         | Operation steps for current initialization of system |



## 2.2.5 Symbols in the menu setting

| Symbol  | Name                  | Description   |
|---|-----------------------|---|
|  | Exit                  | Return to main page. Need to input PIN code to access to the menu again   |
|  | Main page             | Return to main page. Do not need to input PIN code to access to the menu again  |
|  | Selection             | The item is selected or activated   |
|  | Edit                  | Editing this item is permitted  |
|  | Resource requirements | Image requirements:<br><br>Image format: PNG/JPG/JPEG, recommended resolution ratio for the standby advertisement: 1024*600, recommended resolution ratio for the welcome advertisement: 1024*540, and recommended resolution ratio for the preparation advertisement: 660*520. |

| Symbol  | Name                  | Description  |
|---|-----------------------|--|
|  | Resource requirements | <p>Video resource requirements:<br/> Video size:&lt;100M, format:MP4, bitrate:&lt;3000kbps, 25 frames per second.<br/> For the standby advertisement: aspect ratio is 16:9, recommended resolution ratio:1280*720.<br/> For the welcome advertisement: aspect ratio is 16:9, recommended resolution ratio:1280*720.<br/> For the preparation advertisement: aspect ratio is 4:3, recommended resolution ratio:660*520.</p> |

## 2.3 Scope of delivery

The scope of delivery may vary depending on the device configuration

| Part                                | Picture   | Quantity |
|-------------------------------------|---|----------|
| Milk pipe                           |   | 1        |
| User manual                         |  | 1        |
| Tap water connection pipe (K95Plus) |  | 1        |
| Tap water connector (K95Plus)       |  | 2        |
| Barreled water pipe (K95Plus)       |  | 1        |



## 2.4 Technical data

|                            |  |
|----------------------------|--|
| Screen dimensions          | 10.1 Inches  |
| Water tank capacity        | K95-Plus/K95T-Plus: 1.8L<br>K95L-Plus/K95LT-Plus: 6L                     |
| Drip tray capacity         | 2 liter  |
| Grounds container capacity | 30pieces   |
| Coffee spout height        | 80-160mm   |
| Permissible water pressure | 0.05-0.6MPa  |
| Bean hopper capacity       | 1000g  |
| Power supply type          | 220-240V 50Hz/60Hz   |
| Power rating               | 3000W  |
| Machine dimensions (W*D*H) | K95-Plus/K95T-Plus: 304x544x578mm<br>K95L-Plus/K95LT-Plus: 390x544x578mm |
| Noise value                | 17.5kg/19kg  |
| Net weight                 | ≤73dB  |



Depending on the model and sales area of the machine, IOT function is optional. Contact customer service for the details.

The radio frequency and parameters supported by the device are as follows:

| Radio frequency and parameters |  |
|--------------------------------|--|
| TD-LTE                         | ■ B38; ■ B40;                          |
| LTE FDD                        | ■ B1; ■ B3; ■ B7; ■ B8; ■ B20; ■ B28   |
| WLAN                           | ■ 2.4GHz; ■ 5.1GHz; ■ 5.8GHz           |
| Bluetooth                      | ■ BDR ■ EDR ■ BLE                      |
| WLAN section details           |  |
| Support system                 | 2.4GHz : ■ 802.11b ■ 802.11g ■ 802.11n |
|                                | 5GHz : ■ 802.11a ■ 802.11n             |
|                                | 5.8GHz : ■ 802.11a ■ 802.11n           |
| Occupied bandwidth             | 2.4GHz : ■ 20M ■ 40M                   |
|                                | 5.1GHz : ■ 20M ■ 40M                   |
|                                | 5.8GHz : ■ 20M ■ 40M                   |



The radio technical parameters and frequency range of the machine are only matched with the IoT configuration. Contact customer service for the details.

The wireless technical parameters and frequency range that this device can use are as follows, and specific information is subject to model configuration.

|                            |   |  |   |
|----------------------------|---|--|---|
| <b>Media Types</b>         | Commercial fully automatic coffee machine   |  |   |
| <b>Model</b>               | K95-Plus/K95L-Plus/K95T-Plus/K95LT-Plus   |  |   |
| <b>Modulation Mode</b>     | LTE FDD: QPSK/16QAM<br>TD-LTE: QPSK/16QAM<br>BT: GFSK, $\pi/4$ -DQPSK, 8-DPSK<br>WLAN: CCK DSSS/OFDM/GFSK   |  |   |
| <b>TECHNICAL PARAMETER</b> | <b>Frequency range</b>  | <b>Occupied bandwidth</b>  | <b>Transmitted power</b>  |
| <b>Targeted value</b>      | LTE FDD :<br>Band 1:<br>UL: 1920-1980MHz<br>DL: 2110-2170MHz<br>Band 3:<br>UL: 1710-1785MHz<br>DL: 1805-1880MHz<br>Band 7:<br>DL:2620-2690MHz<br>Band 8:<br>UL:880-915MHz<br>DL:925-960MHz<br>Band 20:<br>UL:832-862MHz<br>DL:791-821MHz<br>Band 28:<br>UL:758-803MHz<br>DL:703-748MHz<br>TD-LTE :<br>Band38:<br>2570-2620MHz<br>Band 40:<br>2300-2400MHz<br>BT:<br>2.402-2.4835GHz<br>WLAN:<br>2.400-2.4835GHz<br>5.150-5.350GHz<br>5.725-5.850GHz | LTE-FDD:<br>$\leq 20/15/10/5/3/1.4$ MHz<br>TD-LTE:<br>$\leq 20/15/10/5$ MHz<br>BT: $\leq 2$ MHz<br>WLAN:<br>$\leq 20$ MHz<br>$\leq 40$ MHz | LTE FDD:<br>$\leq 25$ dBm<br>TD-LTE:<br>$\leq 25$ dBm<br>BT:<br>$\leq 20$ dBm<br>WLAN:<br>2.400-2.4835GHz $\leq 20$ dBm<br>5.150-5.350GHz $\leq 19$ dBm<br>5.725-5.825GHz $\leq 19$ dBm |

## 3. Installation

### 3.1 Installation tips

1. Only an instructed service-engineer may install the machine.
2. The manufacturer is not liable for injuries caused by an improper mounting of the unit.
3. Installation must use original accessory.
4. Installation personnel will carry out the initial commissioning process for your coffee machine and walk you through the basic functions.





Please contact customer service for further support if you have any questions

### 3.2 Dimensions


Dimension unit: millimeter


K95-Plus

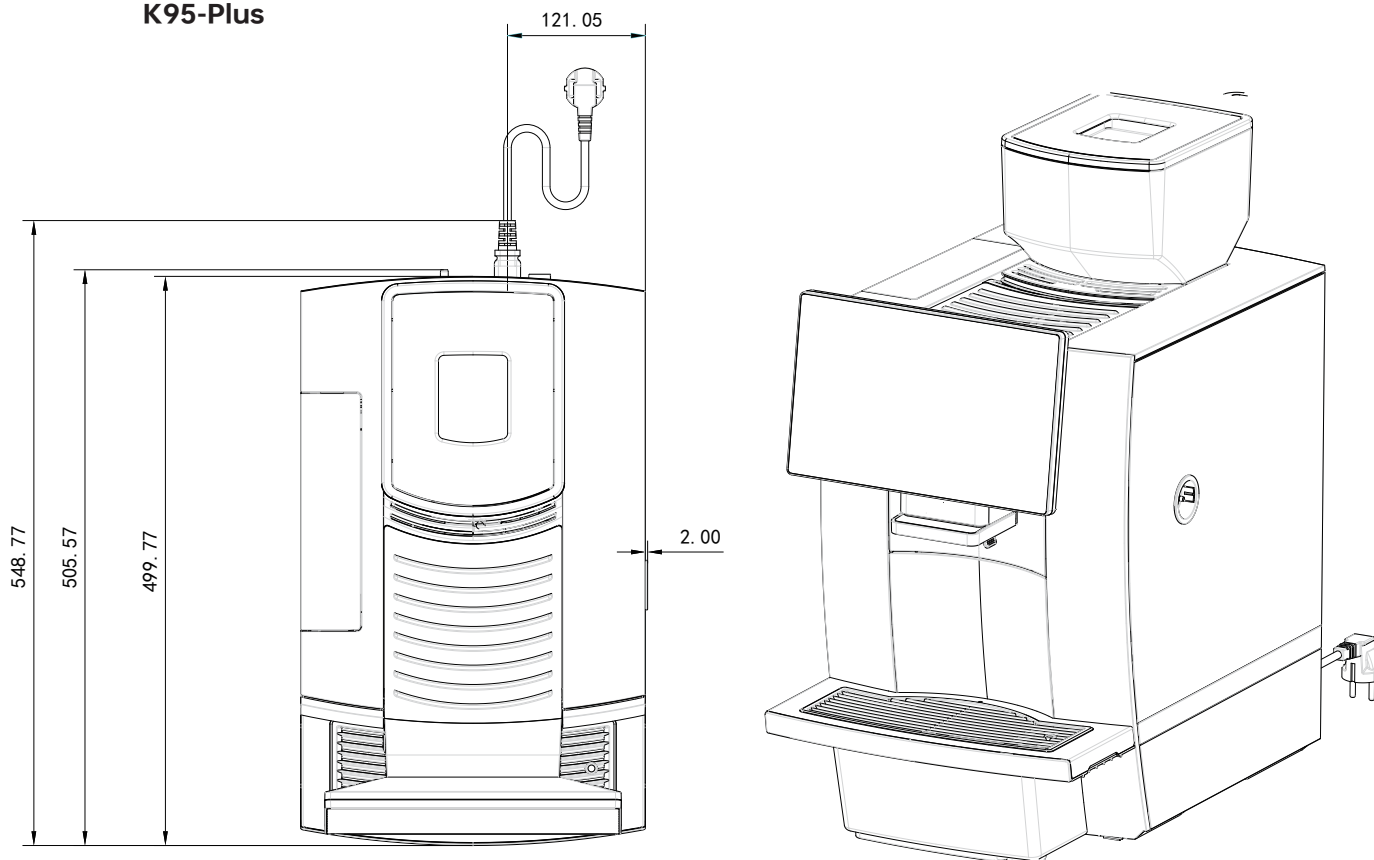

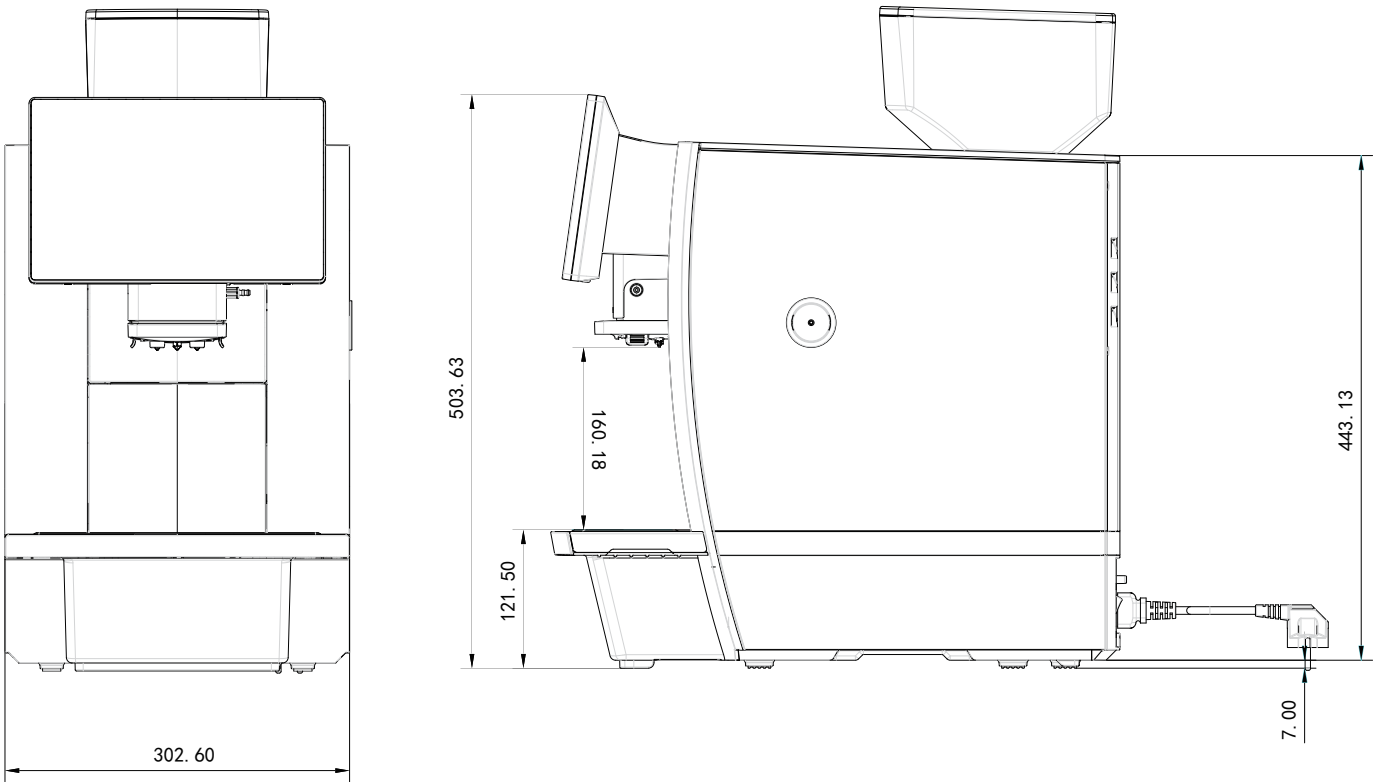

**K95LT-Plus**

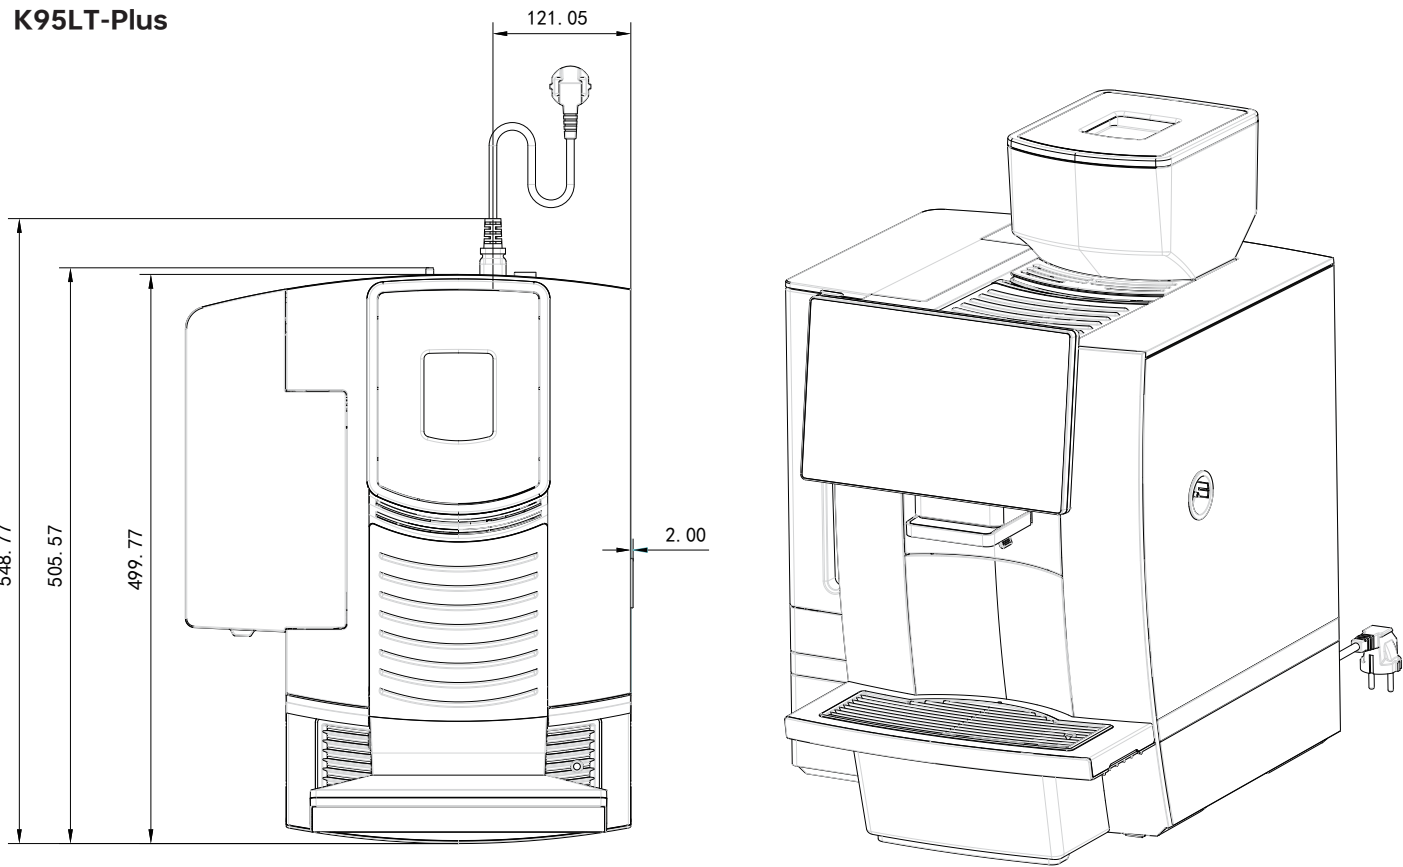

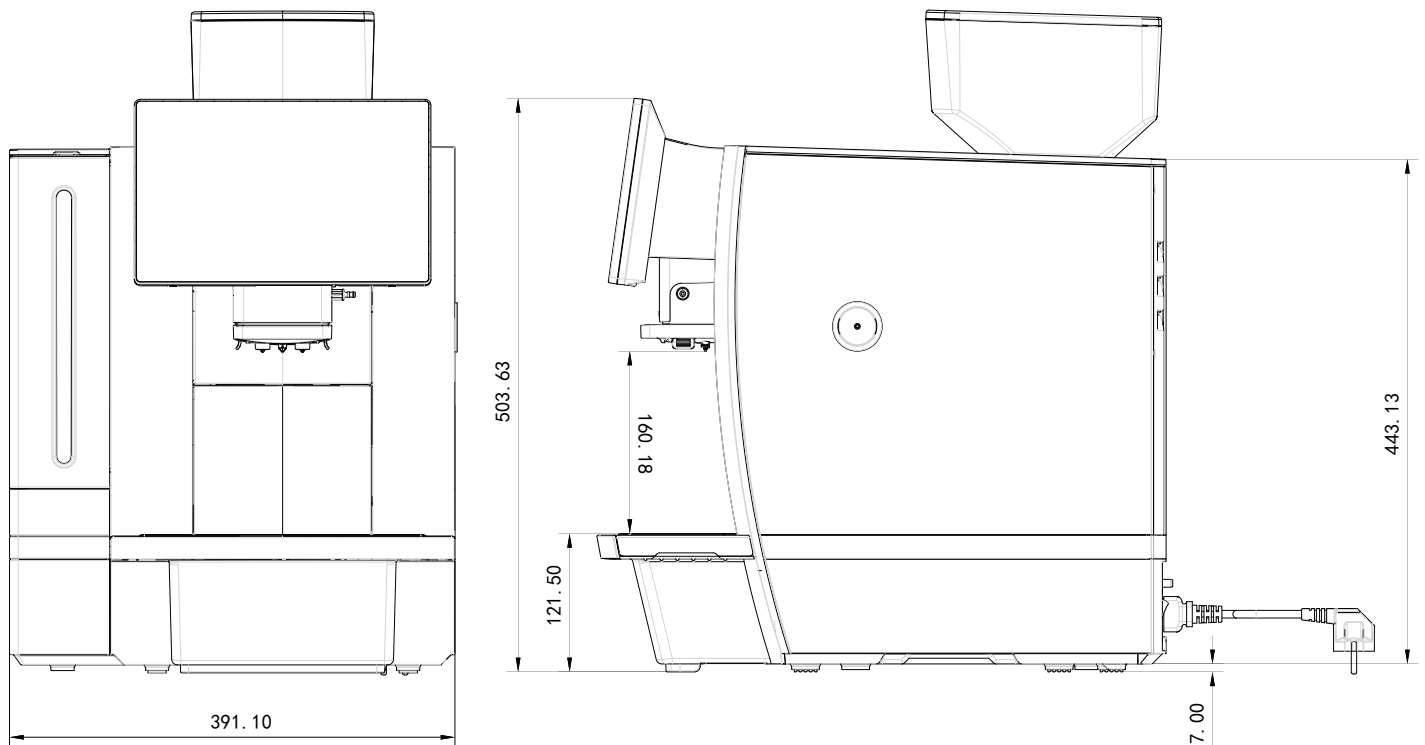

### 3.3 Installation location

1. The installation location must be dry and protected against water spray
2. Some condensate, water can always be discharged from a coffee machine
3. Do not use the coffee machine outdoors.
4. The machine has to be installed on a solid, level and heat-resistant base.
5. The surrounding temperature must be between 5°C~35°C.

### 3.4 Electrical connection

1. The mains connection must correspond with the voltage, amperage and frequency indicated on the machine label.  
Installation of wrong or improper electric plugs can cause short circuit, resulting in fire. The plug has to be selected and installed by qualified service personnel only.
2. The machines are electrically safe only when properly earthed as described in the current electrical safety specifications. Check for compliance and, when in doubt, have the wiring thoroughly inspected by skilled personnel.
3. The manufacturer does not take any responsibility for any damage caused by incorrect earthing or improper use of power supply .
4. No action needed from users to shift the product between 50 and 60Hz, product can adapt itself for both 50 and 60 Hz.

### 3.5 Water supply connection

Tank water supply, fixed water supply and barreled water supply are available for the K95Plus series. Default water supply is water tank.

### 3.5.1 Water quality

|                       |                                  |
|-----------------------|----------------------------------|
| Total hardness:       | 4 – 8 dH GH                      |
|                       | 70 – 140 ppm (mg/l)              |
| Carbonate hardness    | 3–6 dH KH / 50–105 ppm (mg/l)    |
| Acid content/pH value | 6.5–7.5 pH                       |
| Chlorine content      | < 25 mg/l                        |
| TDS                   | 30 – 150 ppm (mg/l)              |
| Electric conductivity | 50–200 $\mu$ S/cm (microsiemens) |
| Iron content          | < 0.3 mg/l                       |

To guarantee the required water quality, a water filter system needs to be installed


### 3.5.2 Tap water connection

The distance between the machine and the water connection should not be more than 1 meter (to connect the appliance, use the supplied original hose only). The water pressure must be between 2-6 bar. If the water pressure is more than 6 bar, a pressure reducing valve must be installed.


### 3.5.3 Barreled water supply connection

Barreled water supply connection needs to use accessories supplied with factory. Please contact customer service for help if you need to use barreled water function.


### 3.5.4 Water filter installation

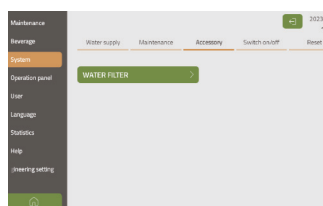

1. Select System-Accesory-Water filter

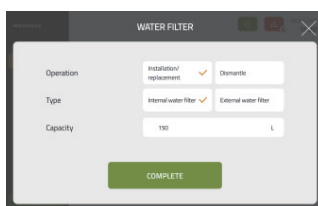

2. Select installation /replacement and internal water filter, input water capacity based on suitable level, then touch "**COMPLETE**"

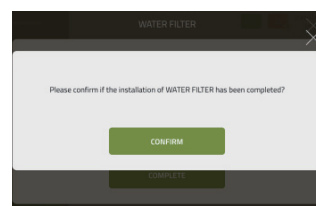

3. Touch "**CONFIRM**"

## 4. Start-up for the first time

### 4.1 Material filling


Adding material into the machine. See page 15 for specific operation




Please use water tank supply for first time use

### 4.2 Initially start-up program setting


After switching on the machine initially, access to the setting of start-up program for the first time is available. Specific process as follows:

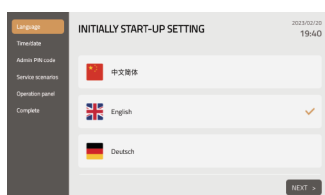


1. Select language

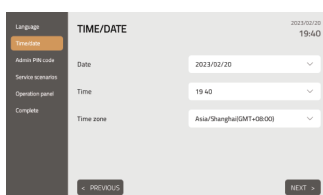


2. Set time and date

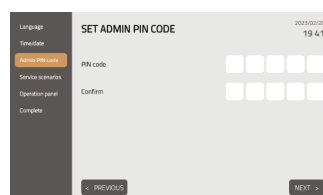


3. Set PIN code

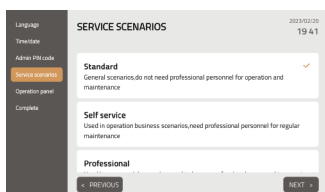

4. Select screen interface

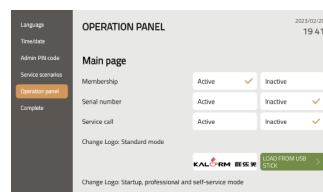

5. Set the panel display

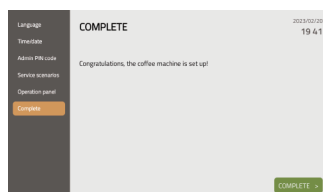


6. Click '**COMPLETE**' to finish the setting

## 5. Operation

### 5.1 Coffee beans filling



1. Lift bean hopper lid

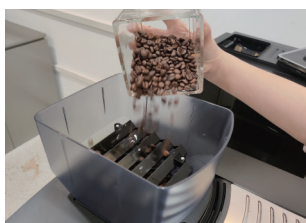

2. Add coffee beans



3. Attach lid



Never put any objects into the bean hopper or grinder. Otherwise, splinters may be ejected, leading to injury.



1. Do not pour ground coffee into bean hopper
2. Do not pour any liquids into bean hopper

## 5.2 Water tank filling



1. Pull out the water tank



2. Fill water tank with drinking water



3. Attach water tank (Ensure water tank is installed in position)



1. Surface of water can not be over the maximum marking identification of water tank
2. Do not fill the water tank with hot water, which may damage machine.

## 5.3 Milk connection



1. Connect milk pipe to machine



2. Insert the milk pipe into the milk container





Store milk in a cooler

## 5.4 Switch on the machine



Process of switch on the machine (please see page 15 start-up for the first time/start-up program.)

## 5.5 Beverage preparation

### 5.5.1 Beverage preparation in 'standard' interface




1. Place an appropriate cup under the beverage outlet



2. Touch beverage icon

3. Beverage in preparation

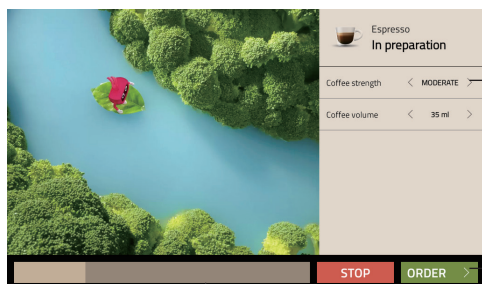

Process bar

Touch '<' '>' can change parameter during the beverage preparation

Touch '**ORDER**' to select another desired beverage

Cancel beverage preparation by touching '**STOP**'

### 5.5.2 Beverage preparation in 'self-service' interface




1. Place an appropriate cup  
under the beverage outlet



2. Touch beverage icon

3. Beverage in preparation

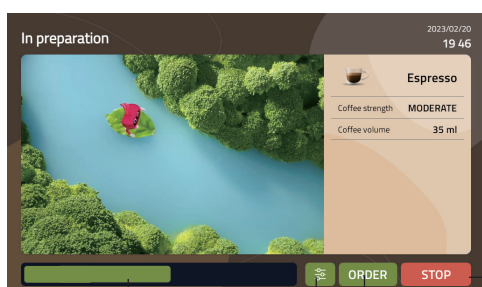

Process bar

Cancel beverage preparation by  
touching '**STOP**'



Touch '**ORDER**' to  
select another  
desired beverage



Change parameter during  
the beverage preparation


### 5.5.3 Beverage preparation in 'professional' interface



1. Place an appropriate cup  
under the beverage outlet



2. Touch beverage icon

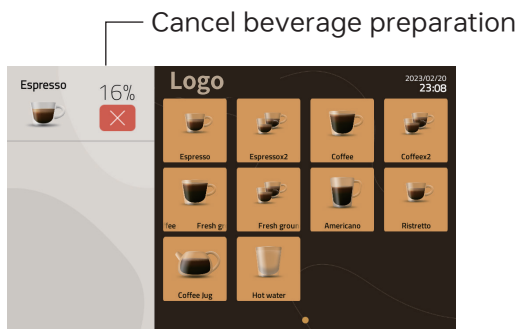

3. Beverage in preparation




4. Queuing function can be used when beverage in preparation. Touch Americano beverage icon when preparing Ristretto, Americano will be displayed in the queuing list as below.

## 5.6 Grinding coarseness setting


Grinding coarseness could be calibrated by using calibration program. Contact your customer service for the help.

# 6. Program setting


## 6.1 Access to the menu

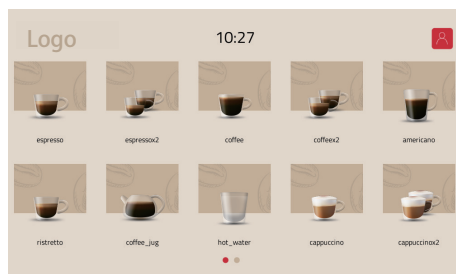

1. Touch logo icon on the upper-left corner

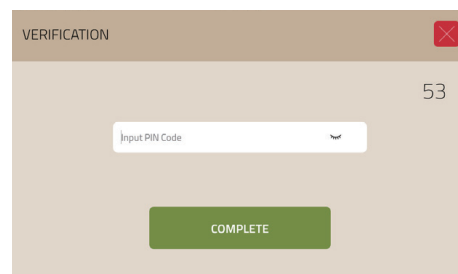

2. Input PIN code and touch complete

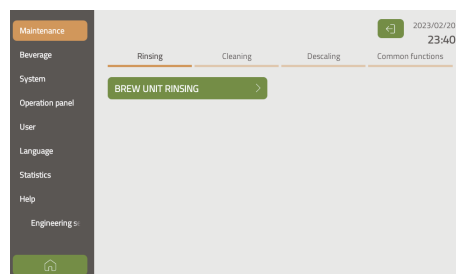


3. Select the target menu




1. PIN codes can be set in the start-up program for the first time. If PIN codes are not set, the default codes are empty.
2. Entering different PIN codes can obtain different menu rights. Specific setting of 'PIN codes' rights assignment can be checked and changed in the menu of System setting/user/maintenance rights.

## 6.2 Program setting menu tree

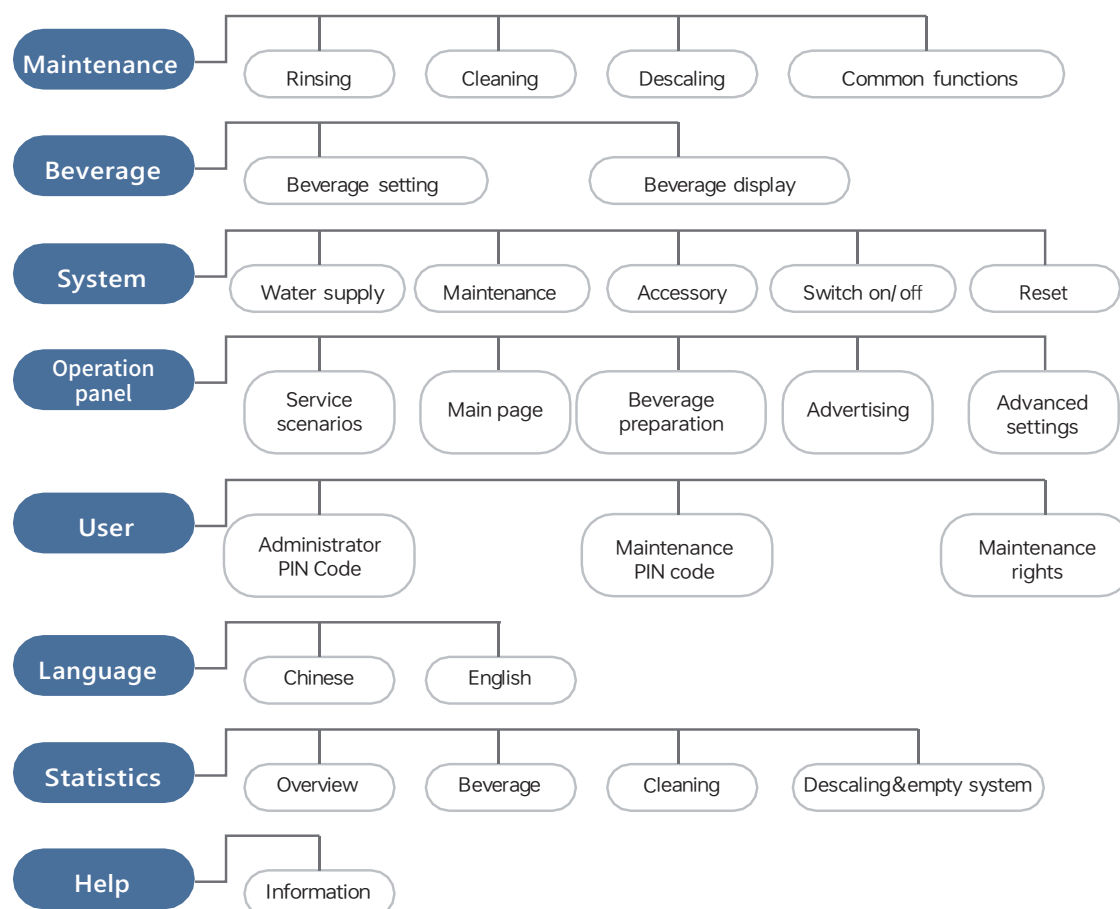


## 6.3 Maintenance

### 6.3.1 Overview of cleaning menu

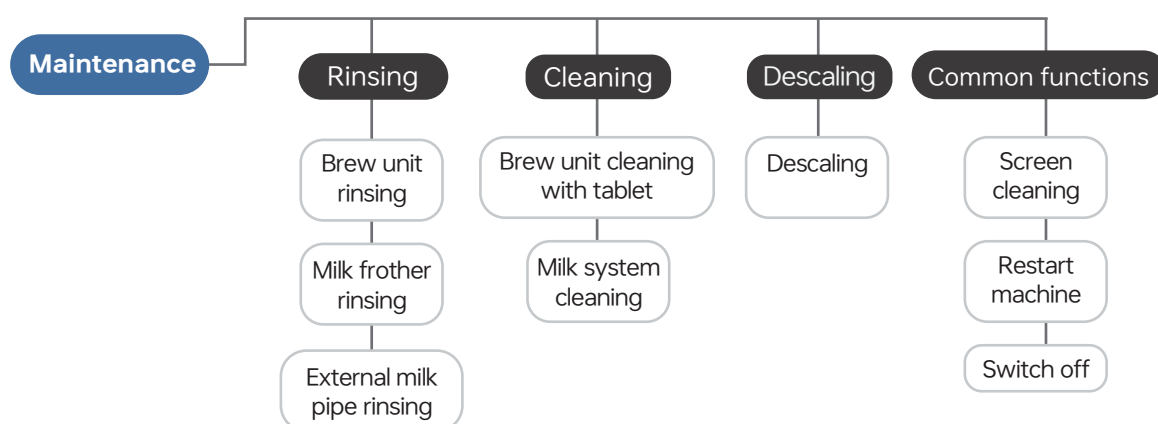

### 6.3.2 Rinsing

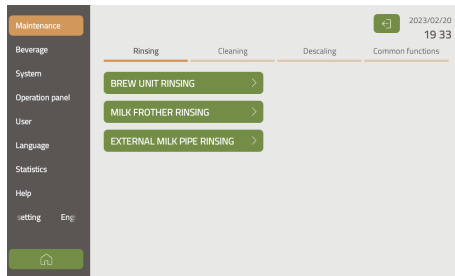

#### Brew unit rinsing

Immediately carry out hot rinsing of brewing system after tapping it.


#### Milk frother rinsing

Immediately carry out hot rinsing of milk frother after tapping it.

#### External milk pipe rinsing

Display insert milk pipe into drip tray, then tap '**Confirm**' will carry out immediately.

### 6.3.3 Cleaning

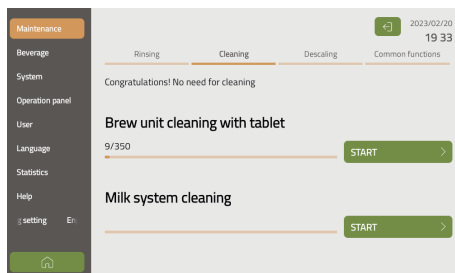

#### Cleaning brew unit

Immediately carry out tablets cleaning program of brew unit after tapping start, if the message of '**Brew unit cleaning with cleaning tablets**' appears on the screen. Cleaning tablets are needed in the process of cleaning. Total duration is approx. 10 minutes.

#### Cleaning milk system


Immediately carry out cleaning process of cleaning milk system after tapping start. Cleaning agent are needed in the process of cleaning. Total duration is approx. 10 minutes.

### 6.3.4 Descaling




Descaling powder is used in the process of descaling. Total duration is approx. 40minutes.

### 6.3.5 Common function

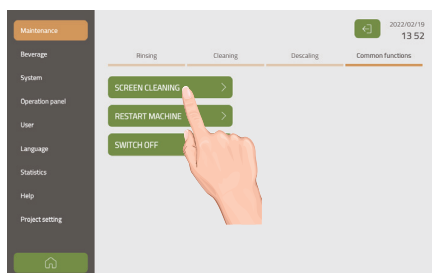

#### Screen cleaning

Machine will be locked for 15 seconds after tapping '**Screen cleaning**'. Now use a cloth to clean the surface of screen.

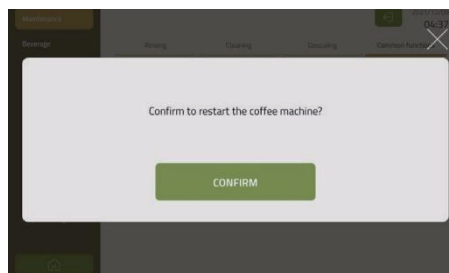


#### Restart machine


Restart machine system after tapping '**Restart**'.

## 6.4 Beverage

### 6.4.1 Beverage setting overview

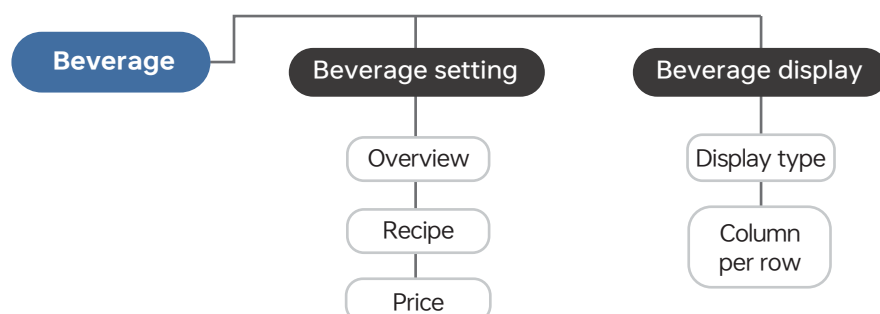


### 6.4.2 Beverage setting

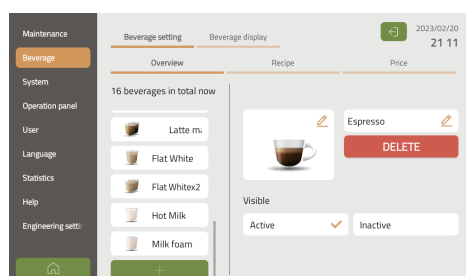

#### 1. Change beverage icon

Change beverage icon after tapping edit icon. Image uploaded from USB stick can be used as beverage icon.

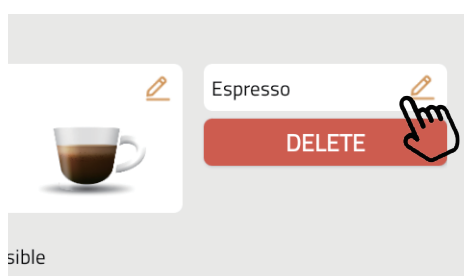


#### 2. Change beverage name

Change beverage name after tapping edit icon. Beverage name can be customized by users using input method.




#### 3. Beverage status

Select 'Active' can prepare this beverage. Select 'Inactive', the beverage will be locked and cannot be prepared.

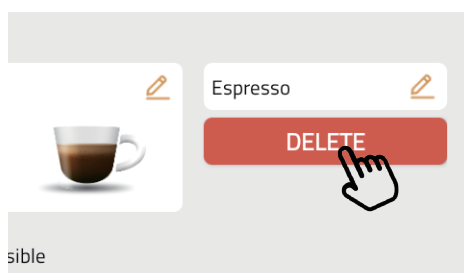

#### 4. Delete the beverage

Tap 'DELETE' key beneath beverage will delete the beverage from beverage list.

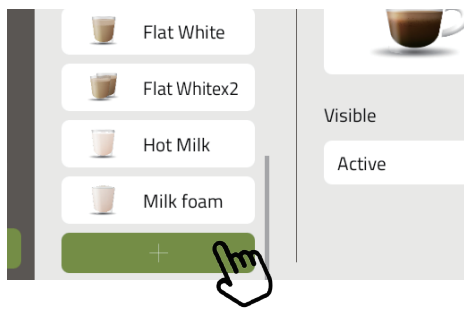


### 5. Add new beverage

Tap 'Add' that you can select new drink that you want to add from popup list. Change and define name and icon of new beverage after adding new drink into menu list.


## Recipe setting

Take Latte Macchiato for example, after touching latte beverage symbol you will be able to access to recipe page, beverage parameter setting modification is permitted.

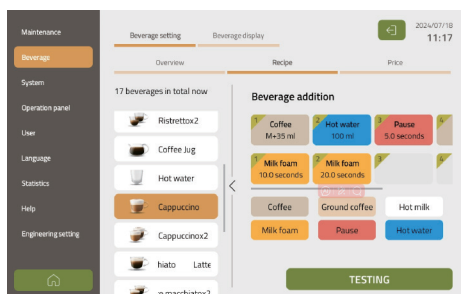


### Check current recipe

A total of 5 groups beverage additions can be prepared simultaneously in order. One beverage addition also can be prepared in order.

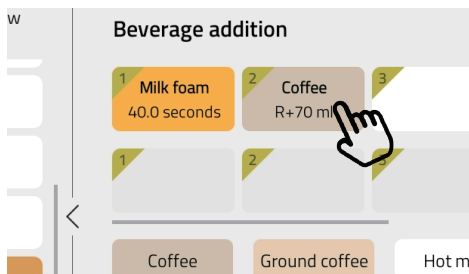


### Change recipe order

Press recipe icon (e.g. coffee) and drag it to change its position.

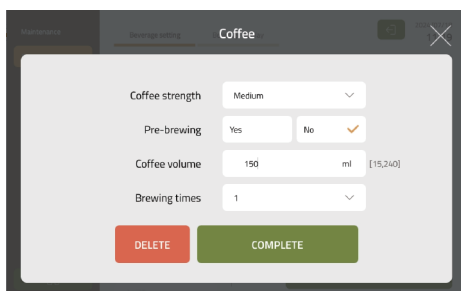


### Change recipe parameters

Tap recipe, and changing recipe parameter is permitted. Specific settable value range needs to comply with limited condition of software.

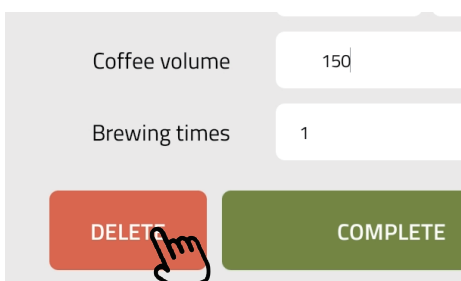

### Delete recipe

Access to recipe page and tapping 'Delete' button.

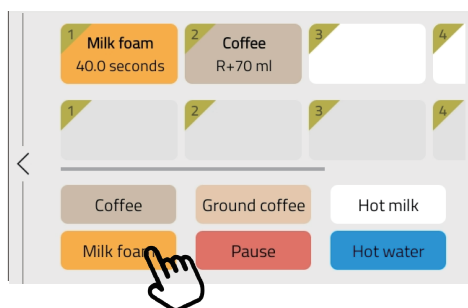

### Add recipe

1. Display beverage recipe composition after tapping recipe.
2. A total of 10 beverage additions can be added.
3. Specific settable value range needs to comply with the limited conditions of software.
4. Every settable recipe parameter as shown in the left image

## Addable recipe parameter

### Coffee

| Parameter       | Value range | Remarks       |
|-----------------|-------------|---------------|
| Pre-brew volume | 0~30ml      | Default:25ml  |
| Coffee volume   | 15~240ml    | Default:150ml |
| Single brewing  | yes or no   | Default:yes   |
| Brewing times   | 1~4 times   | Default:1     |

### Hot milk

| Parameter | Value range   | Remarks             |
|-----------|---------------|---------------------|
| Time      | 5~120 seconds | Default: 10 seconds |

### Milk foam

| Parameter | Value range   | Remarks             |
|-----------|---------------|---------------------|
| Time      | 5~120 seconds | Default: 10 seconds |

### Hot water

| Parameter         | Value range       | Remarks        |
|-------------------|-------------------|----------------|
| Water volume      | 25~450ml          | Default: 100ml |
| Water temperature | High, Medium, Low | Default: High  |

### Pause

| Parameter | Value range  | Remarks            |
|-----------|--------------|--------------------|
| Time      | 1~20 seconds | Default: 5 seconds |

### Test

Tap '**Test**' to prepare the drink using the modified recipe after recipe setting is completed, and test if the drink can satisfy the expectation.



6.4.3 Beverage Display

The beverage display is grid layout.

Grid layout




Grid layout parameter setting as follows:


| Parameter  | Value range |         |             |         | Remarks      |
|------------|-------------|---------|-------------|---------|--------------|
| Column per | 1x1         | 2x1 3x1 | 4x1 5x1 3x2 | 4x2 5x2 | Default: 5×2 |

## 6.5 System

### 6.5.1 Overview of system menu

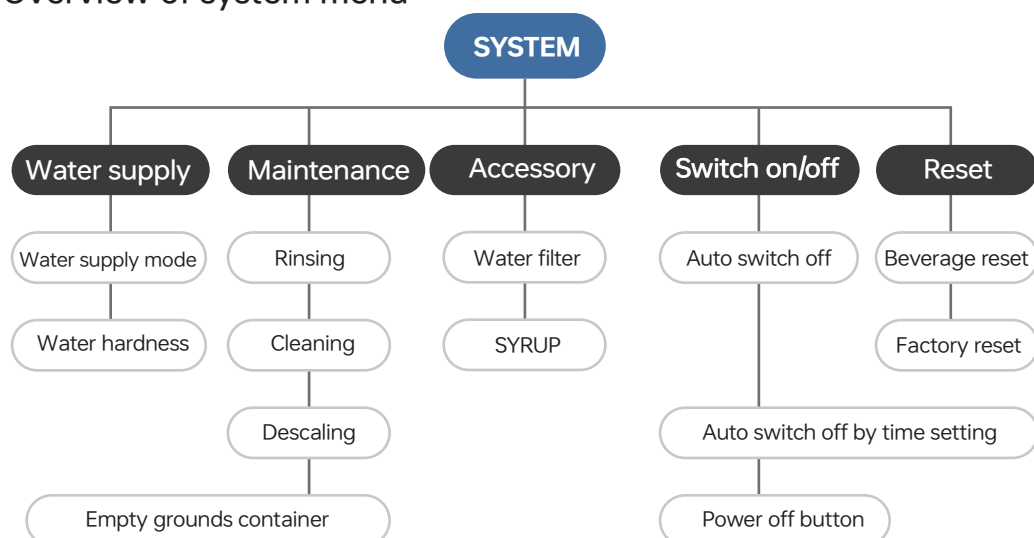


### 6.5.2 Water supply

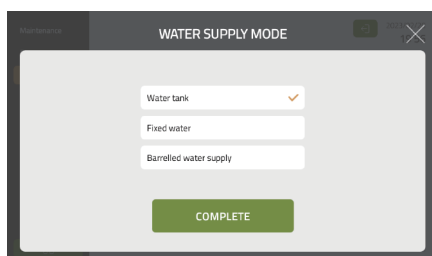

#### Water supply mode

Select corresponding water supply mode. Default setting is water tank supply.

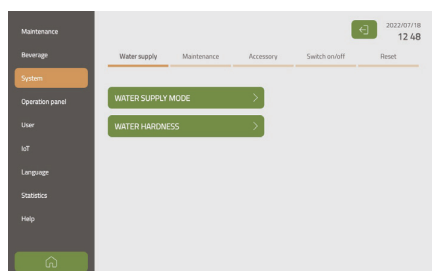

#### Water hardness

Setting water hardness value for the machine here. Default setting: 5 dh.

### 6.5.3 Maintenance parameter setting

#### Rinsing

Rinsing parameter setting as below:

| Parameter                 | Set range         | Remarks             |
|---------------------------|-------------------|---------------------|
| Warm-up rinsing           | 0.5~4 hours       | Default: 30 minutes |
| Brew unit auto rinsing    | Off, 5~20 minutes | Default: Off        |
| Milk frother auto rinsing | Off, 5~20 minutes | Default: 10 minutes |

### Cleaning

Parameter setting of brewing unit cleaning with tablets as below:


| Parameter   | Set range  | Remarks           |
|---|------------|-------------------|
| Brewing unit cleaning with tablets warning cups         | [250, 350] | Default: 350 cups |
| Compulsory brew unit cleaning with tablets warning cups | [350, 450] | Default: 450 cups |

### Descaling

Water hardness, water flow and water filter installation or not, which determine the liter and time remaining before descaling. Parameter setting of descaling as below:

| Parameter         | Set range | Remarks             |
|-------------------|-----------|---------------------|
| Descaling warning | ≥0 liter  | Default: 250 liters |
| Forced descaling  | ≥0 liter  | Default: 300 liters |


### Empty grounds container

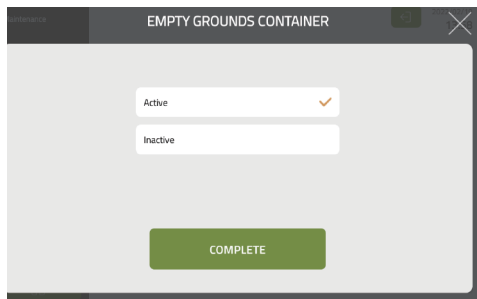

1. Select '**Active**', '**Empty grounds container**' will be displayed when the coffee grounds pcs reaches to 30 or the thickness reaches to 400mm;
2. Select '**Inactive**', '**Empty grounds container**' will not be displayed on the screen.

## 6.5.4 Accessories

### Water filter

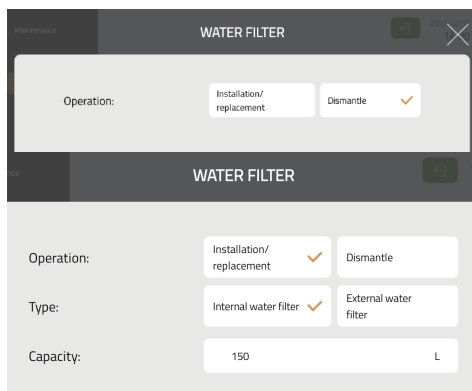


1. Select '**Dismantle**' if not installing the water filter;
2. Select '**Installation/Replacement**' here if installing or replacing filter cartridge. Need to select the type of filter cartridge and input capacity here.
3. Default setting: '**Dismantle**'

## 6.5.5 Switch off

### Auto switch off countdown


Setting the auto switch off countdown here, like auto switch off the machine in 4 hours.

| Parameter                 | Set range                                  | Remarks          |
|---------------------------|--|------------------|
| Auto switch off countdown | 30 minutes, 1~24 hours<br>Never switch off | Default: 4 hours |

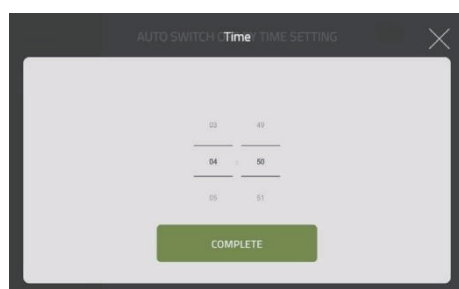

### Auto switch off by time setting


Setting the time of auto switch off here, like 9 :15 am.

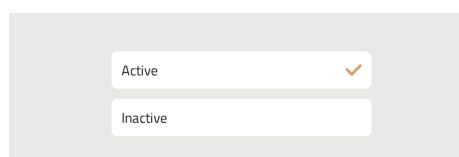

### Power off button

1. Select '**Active**', press power button for 3 seconds to turn off the screen.
2. Select '**Inactive**', the function of screen power switch is disabled.

## 6.5.6 Reset

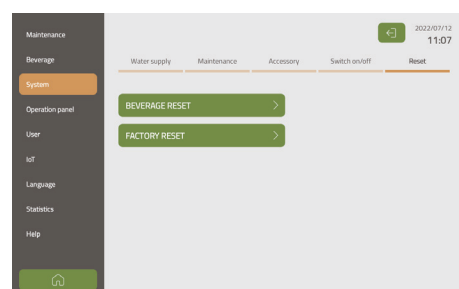

### Beverage reset


Restore all relative parameters of beverage to factory default setting.

### Factory reset

Restore all parameters of machine to factory default setting.

## 6.6 Operation panel

### 6.6.1 Service scenarios

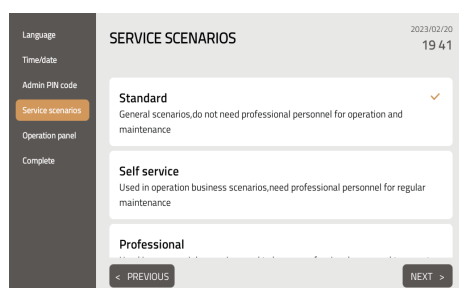


Select interface mode displayed on the screen. Specific introduction of each interface mode displayed on the screen see page 6.

### 6.6.2 Main page

#### Member function

Option: Active Inactive

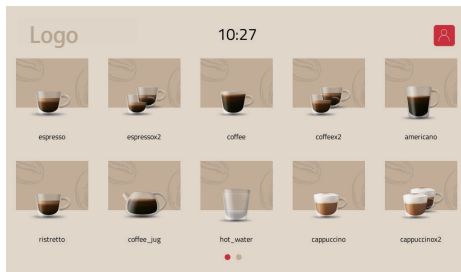

1. Select '**Active**', tap membership key in the upper-right corner of screen, then create member and favorite drinks list.

2. Select '**Inactive**', membership key is not displayed.

#### Serial number

Option: Active Inactive



1. Select '**Active**', machine serial number is displayed in the lower left corner of screen.

2. Select '**Inactive**', machine serial number is not displayed.

#### Service call


Option: Active Inactive



1. Select '**Active**', service call is displayed in the lower right corner of screen.

2. Select '**Inactive**', service call will not be displayed.

#### LOGO Change

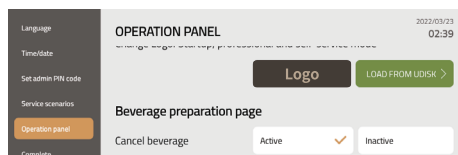

Touch edit key to change logo displayed on the screen. Load new Logo image from USB stick.




Backgrounds of LOGO image used in start-up page, professional mode and self-service mode must be black.

### 6.6.3 Beverage Preparation

#### Cancel beverage

Option: Active Inactive

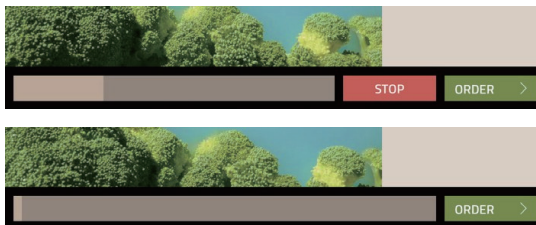


1.If selecting '**Active**', drink preparation can be canceled by touching '**STOP**'.

2. Select '**Inactive**', '**STOP**' will not be displayed.

#### Beverage adjustment

Option: Active Inactive

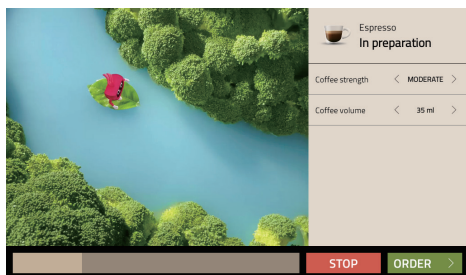


1.Select '**Active**', drink recipes could be adjusted by touching left and right key when the beverage is in production.

2.Select '**Inactive**', drink recipes could not be adjusted when the beverage is in production.

#### Volume display

Option: Active Inactive

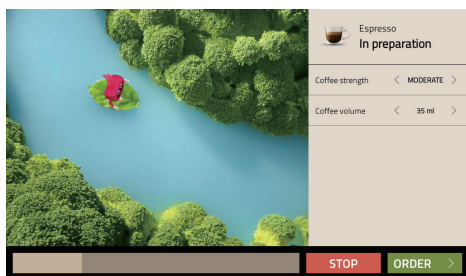


1.Select '**Active**', drink recipes will be displayed when the beverage is in production.

2.Select '**Inactive**', drink recipes will not be displayed when the beverage is in production.

#### Continue to order

Option: Active Inactive

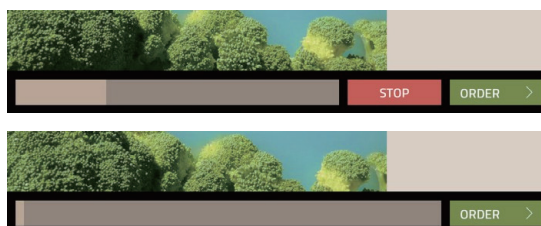

1. Select '**Active**', touch '**ORDER**' to select next drink.

2. Select '**Inactive**', '**Order**' will not be displayed.

## 6.6.4 Advertising

### AD - Standby

Set advertisement videos when the machine is in standby. Advertising resources could be loaded from USB stick.



Video requirements: MP4 format, preferably less than 100M, Recommended resolution ratio: 1280\*720, video bitrate: <3000kbps, aspect ratio: 16:9.  
Image format: PNG/JPG/JPEG, display resolution size: 1024\*600.

### AD - Welcome

Set advertisements when the machine is started.



Video requirements: MP4 format, preferably less than 100M, Recommended resolution ratio: 1280\*720, video bitrate: <3000kbps, aspect ratio: 16:9.  
Image format: PNG/JPG/JPEG, display resolution size: 1024\*540.


### AD - Beverage in preparation

Set advertisements when the beverage is in preparation.



Video requirements: MP4 format, preferably less than 100M, Recommended resolution ratio: 660\*520, video bitrate: <3000kbps, 25 frames per second, aspect ratio: 4:3.  
Image format: PNG/JPG/JPEG, display resolution size: 660\*520.

## 6.6.5 Advanced settings

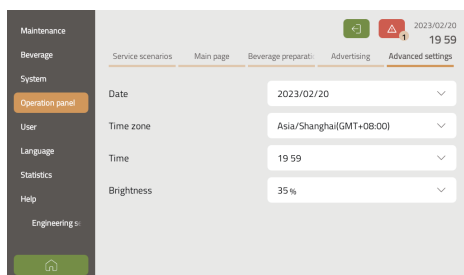

### Date

Set local date

### Time zone

Set local time zone

### Time

Set local time

### Brightness

Set brightness. Default: 60%

## 6.7 User

Different user rights can be assigned with corresponding PIN code.

### 6.7.1 Administrator PIN Code

Set admin PIN code, which is formed from 5 digits. Inputting correct pin code can view all rights of menu.

### 6.7.2 Maintenance PIN code

Set maintenance PIN code here, which is formed from 4 digits. Inputting correct pin code can view assigned maintenance rights.


### 6.7.3 Maintenance rights

| Maintenance                | Selection | Cleaning                       | Selection |
|----------------------------|-----------|--------------------------------|-----------|
| Rinsing                    |           | Cleaning                       |           |
| Brew unit rinsing          | ✓         | Brew unit cleaning counter     | ✓         |
| Milk frother rinsing       | ✓         | Brew unit cleaning with tablet | ✓         |
| EXTERNAL MILK PIPE RINSING | ✓         | Milk system cleaning           | ✓         |
| Descaling                  |           | Common functions               |           |
| Descaling                  | ✓         | Screen cleaning                | ✓         |

Setting specific rights for maintenance PIN code here.




### 6.8 Language

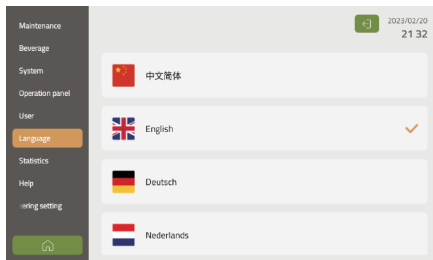


Display available languages here. Select language.  
Default language setting is English.

### 6.9 Statistics

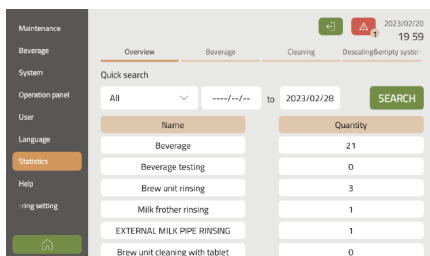

View the history records of various beverage preparation data, total drink qty, care and maintenance here.

#### 6.9.1 Beverage

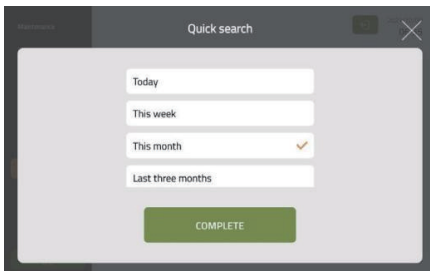

#### Quick search


Data can be viewed by 1 week, 1 month, 3 months, current date, half year, one year  
Viewing the data of certain time can be customized. The data could be presented in two ways: tables and graphs.

#### 6.9.2 Cleaning



Specific time records of various cleaning items can be viewed here, including the start time, ending time and duration time of cleaning items.

#### 6.9.3 Descaling/empty system

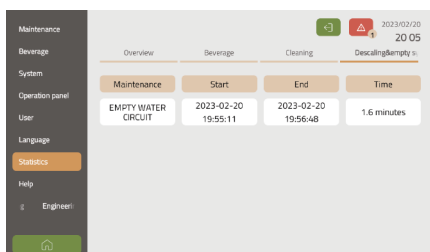


History records of descaling and emptying water system can be viewed here.

## 6.10 Help

### About

#### View Machine Information

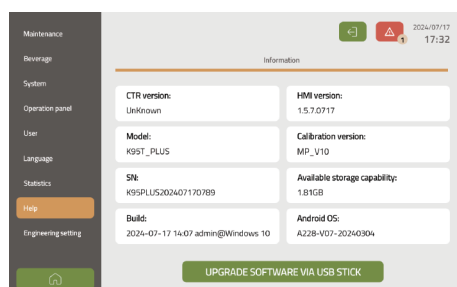

Information regarding this machine could be viewed here including:

- CTR version (PCB software)
- HMI version (Screen software)
- Android system version
- Calibration file version
- Serial number of machine
- Available storage space of screen

#### Upgrade software via USB stick

Program of machine can be upgraded by USB stick



Software program upgrade needs to be instructed by professional technician, contact customer service personnel for help

## 7. Cleaning and maintenance

The perfect coffee experience depends on a perfectly cleaned coffee machine. Clean your coffee machine at least once a day and more frequently if necessary. Clean the machine immediately if you find that it is dirty or clogged.

### 7.1 Cleaning intervals overview


| Cleaning intervals   | Operation               | Type                            |
|----------------------|-------------------------|---------------------------------|
| Daily<br>(or needed) | Brew unit rinsing       | Automatic or manual             |
|                      | Milk frother rinsing    | Automatic or manual             |
|                      | Empty drip tray         | Manual                          |
|                      | Empty grounds container | Manual                          |
|                      | Clean the screen        | Manual                          |
|                      | Clean milk frother      | Manual                          |
| Weekly               | Clean the brew unit     | Manual                          |
|                      | Clean the water tank    | Manual                          |
|                      | Clean the milk frother  | With cleaning agents            |
| If presents          | Brew unit cleaning      | When the screen shows a message |
|                      | Descaling               | When the screen shows a message |
|                      | Filter change           | When the screen shows a message |

## 7.2 Parts preparation

| Parts                       | Usage                                      |
|-----------------------------|--|
| Cleaning tablet             | Brew unit cleaning with tablet             |
| Milk system cleaning agents | Milk system cleaning                       |
| Descaling powder            | Descaling                                  |
| Milk hose brush             | Clean milk hose manually                   |
| Damp cloth                  | Clean bean hopper, screen, machine surface |

## 7.3 Daily cleaning

### 7.3.1 Brew unit rinsing / Milk frother rinsing/ External milk pipe rinsing

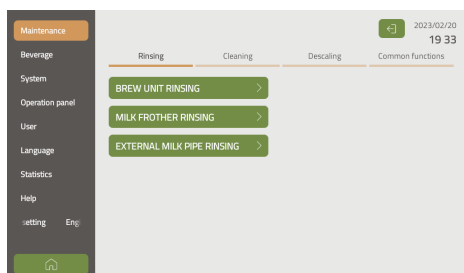

1. Every automatic rinsing intervals could be set in '**Menu / Maintenance**' setting, then rinsing will be processed automatically after reaching the setting condition.



2. Rinse immediately by manual selection. Enter '**Maintenance/Rinsing**' menu, and touching each rinsing option can rinse at once.



Hot water will be dispensed from coffee spout during rinsing, be careful to avoid scalding.

### 7.3.2 Empty grounds container

Empty grounds container (at least once per day).




1. Remove grounds container



2. Pour out the coffee grounds



3. Clean it thoroughly with fresh water

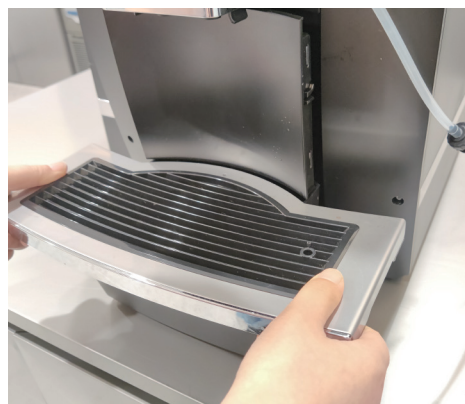

4. Dry and place the grounds container back

### 7.3.3 Empty drip tray

The drip tray is below the grounds container. Clean the drip tray as needed (at least once per day).



1. Remove the drip tray



2. Pour out waste water



3. Clean it thoroughly with fresh water




4. Dry and place the drip tray back



Must clean the two metal plates in front of the drip tray and keep them dry, otherwise, 'empty drip tray' will be misreported.

### 7.3.4 Clean the screen

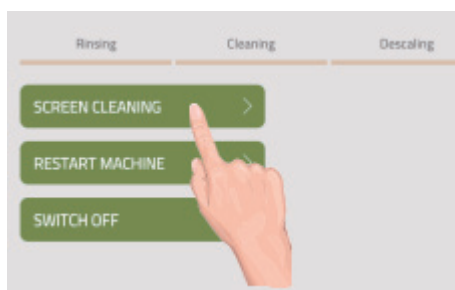

Enter '**Maintenance/Common functions**'. Select '**SCREEN CLEANING**' to start a 15- second countdown. Now screen can be wiped by a dry cloth.

## 7.4 Weekly cleaning

### 7.4.1 Cleaning milk frother manually




1. Take the milk frother out



2. Disassemble the milk frother



3. Clean milk frother with fresh water and place it back

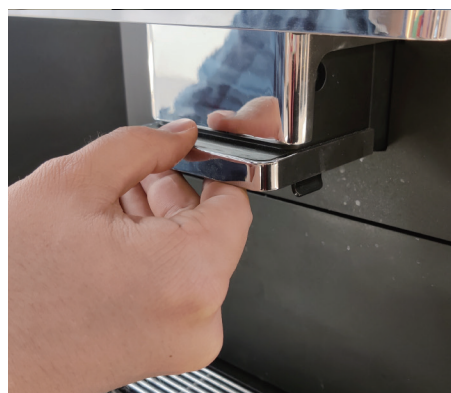


4. Place it back



Specific process of cleaning milk frother manually can be viewed from '[Help/video/cleaning milk frother manually](#)' .

#### 7.4.2 Clean the brew unit with the brush

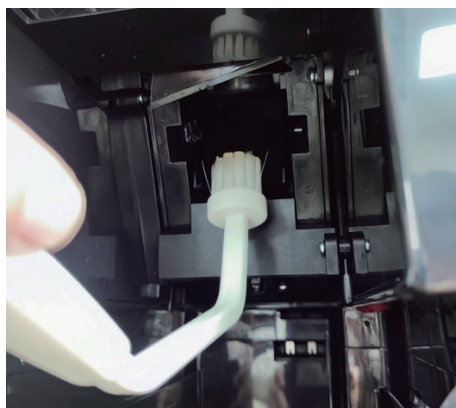


1. Brew unit will be clogged when coffee beans are grinded too fine.

Suggest using a brush to clean brew unit per week.




## 7.5 Brew unit cleaning if presents

A message '**Brew unit cleaning with tablet**' will appear on the screen when the coffee system needs to be cleaned with a tablet. Total duration is approx. 10 minutes.

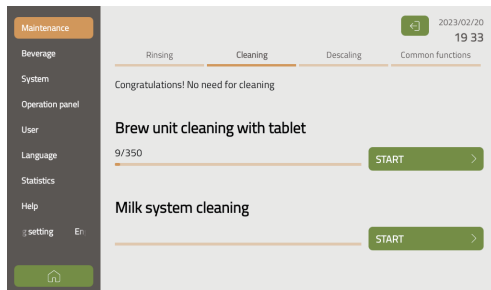

1. Access to '**Maintenance/Cleaning**' menu

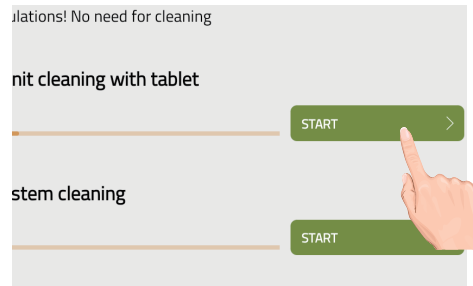

2.Touch '**START**' button



3. Touch '**Confirm**' to start the cleaning


4. Perform every step according to the message displayed on the screen




If brew unit cleaning with tablets is not performed in time, the screen will be locked after reaching the preset compulsory cleaning intervals, and cannot continue to use the machine until cleaning process has been completed.

## 7.6 Milk system cleaning

A message '**Milk system cleaning**' will appear on the screen when the milk system need to be cleaned with cleaning liquid.Total duration is approx. 10 minutes.

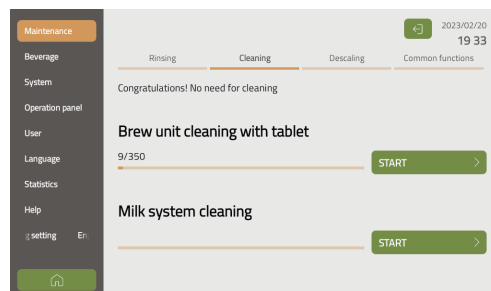

1. Access to '**Maintenance/Cleaning**' menu

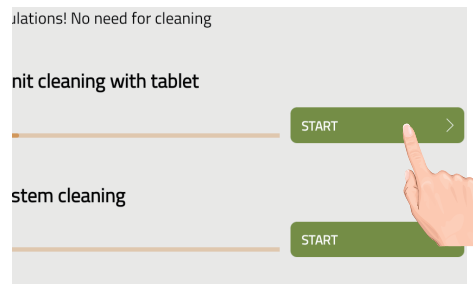

2.Touch '**START**' button



3. Touch '**Confirm**' to start the cleaning

4. Perform every step according to the message displayed on the screen



During descaling, descaling solution will flow out of the spout. So never reach under the spout while descaling.


## 7.7 Descaling if presents

The water hardness, water flow, and whether a water filter is used determine the schedule for descaling. Descaling time is calculated by the K95Plus series and displayed.


### 7.7.1 Descaling



If descaling is not be carried out in time, the screen of machine will be locked after reaching the preset compulsory descaling, and the machine cannot continue to use until descaling process has been completed.

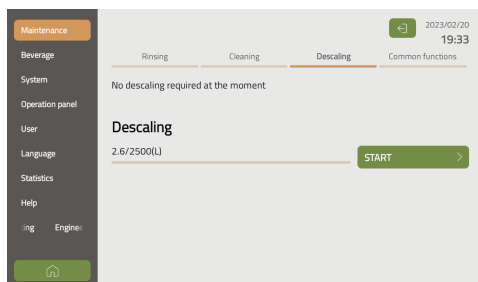

1. Access to '**Maintenance/Cleaning**' menu

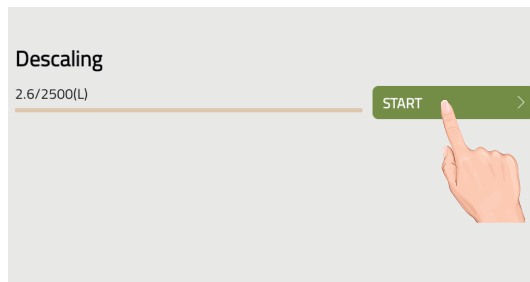

2. Touch '**START**' button



3. Touch '**Confirm**' to start the cleaning

4. Perform every step according to the message displayed on the screen






During cleaning and descaling, hot cleaning solution or descaling solution flows out of the spout. So never reach under the spouts while descaling.

## 8. Messages and explanation

### 8.1 Operational messages

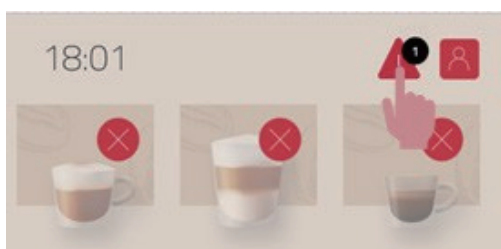

When an error occurs, the machine displays an error message, which is indicated by a red triangle in the upper-right corner of the operator panel. Tap this symbol to obtain more information.

| Information  | Possible solutions   |
|--|--|
| Place the water tank   | Check whether the water tank is installed correctly or place it back |
| Fill water tank  | Fill water tank  |
| Place drip tray  | Place drip tray back   |
| Empty drip tray  | Empty drip tray  |
| Empty grounds container                                      | Empty grounds container  |
| The coffee system empty                                      | Check the coffee circuit   |
| The steam system empty                                       | Check the steam circuit  |
| Multi-way valve warning                                      | Check the steam multi-way valve                                      |
| Brew unit reset  | Check the brew unit  |
| Software error   | Restart the machine  |
| Serial port failure, please check the serial port connection | Check the main PCB   |
| CTR error  | Flash the software   |

## 8.2 Error message

The error message will appear automatically when the entire system is affected by an error. Restart machine if serious problems appear.

1. Switch off the machine by main switch when restarting the machine
2. Please contact service technician if the machine cannot be started or if you are unable to fix error

| Error code | Error description   | Possible solutions  |
|------------|---|---------------------|
| E2         | NTC sensor detect if thermoblock (coffee) temp higher than 105 °C | Restart the machine |
| E3         | NTC sensor detect if thermoblock (steam) temp higher than 185 °C  | Restart the machine |
| E43        | The brew unit gear does not run for correct cycles                | Check the brew unit |
| E33        | No communication between CTR and HMI                              | Check the main PCB  |
| E1         | PCBA error  | Restart the machine |

## 9. Decommissioning

### 9.1 Preparing for decommissioning

1. Clean the machine by using all cleaning and rinsing function.
2. Cleaning after emptying bean hopper.
3. Clean beverage spout and milk pipe manually.
4. Clean brew unit with the brush.
5. Clean drip tray and grounds container etc.

### 9.2 Short-term decommissioning (within one month)

1. Empty water circuit (Have your coffee machine drained by your service technician).
2. Disconnect the machine from the power supply.
3. Shutting off the water supply.
4. Switch off the add-on units and disconnect them from the power supply.

### 9.3 Long-term decommissioning (over one month)

Some components may no longer function as they should if they have been stored or unused for long periods.

Coffee machine must be maintained, installed, and cleaned before preparing any drinks.

1. Have your coffee machine drained by your service technician.
2. Remedial maintenance may be required when commissioning the machine again if it has been stored in excess of 6 months. Please contact service personnel for support.

## 10. Transport and storage

### 10.1 Transport

Protect the machine from mechanical damage and adverse environmental conditions during transport and storage.

1. Protect the machine from falling or tipping over.
2. Restore external packaging of machine well to use in transportation.
3. In order to avoid the damage to machine, water in the coffee machine must be emptied before transportation.
4. After the completion of emptying water circuit, dry the machine, inside and out.



Empty water circuit must be performed by professional technician, please contact service personnel for support



If the program of emptying water circuit is performed, coffee system needs to re-perform the program that has been carried out in the first time use when using the machine again

## 10.2 Storage

Storage conditions must be fulfilled:

1. Permissible temperatures: -10 to +50°C
2. If the machine has not been drained and emptied completely, it must not be stored at sub-zero temperatures
3. Set the machine up in a standing position
4. Machine system emptied
5. Machine and accessories packaged, preferably in their original packaging.

## 10.3 Recommissioning after prolonged periods of storage or non-use

Coffee machine may no longer function if they have been stored or unused for periods in excess of 6 months. Contact your service team for information regarding restoring and recommissioning your machine.

## 11. Disposal

When disposal of coffee machine, some internal spare parts are still worth using again, pay attention to deal with old parts in an environmentally neutral way.

1. Beans can be composted.
2. Observe the information on the label when disposing of any unused cleaning agent.
3. Dispose of the fluids from the cleaning container or the drip tray in the wastewater system.



Dispose of electronic parts separately



Dispose of plastic parts in accordance with their marking

